

HS-2510W/HS-2512W/HS-2410W JUMPER SETTING

- **JP1 : COM3 PORT DC SUPPLY SELECT**
Pin 1-2 Short : COM3 Pin1 connected as 12V DC
Pin 2-3 Short : COM3 Pin1 connected as DCD
- **JP2 : Select LCD Power**
Pin 1-2 Short : 3.3V
Pin 2-3 Short : 5V
- **JP3 : For CR open/close status port selection**
Pin 1-3 、 2-4 Short: For COM1
Pin 3-5 、 4-6 Short : For COM5
- **JP8 : USB Touch Signal Select**
Pin 1-2 Short: PC Touch or IR Touch Used
Pin 2-3 Short: On Board 5 Wires Resistance Touch Used
- **JP6 : CR Voltage Select**
Pin 1-2 Short : CR For 12V
Pin 2-3 Short : CR For 24V
- **JP7 : COM1/COM2 PORT DC SUPPLY SELECT**
Pin 1-3 Short : COM1 Pin1 connected as 12V DC
Pin 3-5 Short : COM1 Pin1 connected as DCD
Pin 2-4 Short : COM2 Pin1 connected as 12V DC
Pin 4-6 Short : COM2 Pin1 connected as DCD
- **COM1~COM3 : +5V through BIOS ; VGA +12V through BIOS**
Press ESC to access Advanced/ Miscellaneous Configuration
VGA DSUB 12V : Disabled
COM1 DB9 5V : Disabled
COM2 DB9 5V : Disabled
COM3 DB9 5V : Disabled

※ DIP SWITCH2 (SW2) :

SWITCH2		FUNCTION
1 On	2 OFF	Default
1 OFF	2 ON	Clear CMOS
3	OFF	Linux or WinCE
	ON	Windows OS(Win98, Win2000, WinXP)(Default)
4	OFF	Fujitsu Touch Panel.
	ON	ELO Touch Panel or ABON Touch Panel
5	ON	Ms-DOS
	OFF	(Windows, Linux ,Win CE(Default)
6	ON	Reserved
	OFF	Reserved
7	ON	Reserved
	OFF	Reserved
8	ON	Reserved
	OFF	Reserved

